


Veritas® Bench Anchor


05G22.05

Patent Pending


For use in 0.745" to 0.775" diameter dog holes at least 1 1/4" deep.

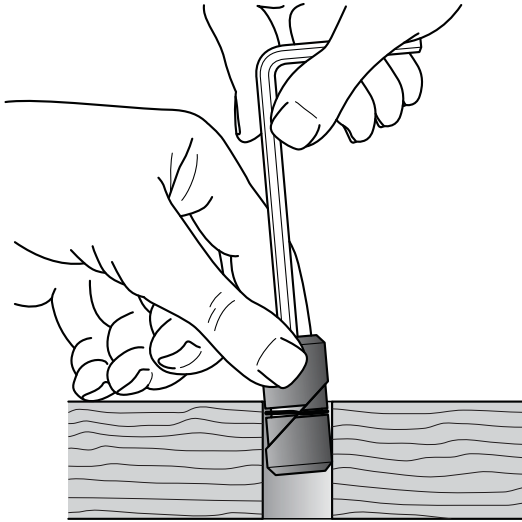


1. Place bench anchor in dog hole and adjust O-ring friction with a $\frac{3}{16}$ " hex key.

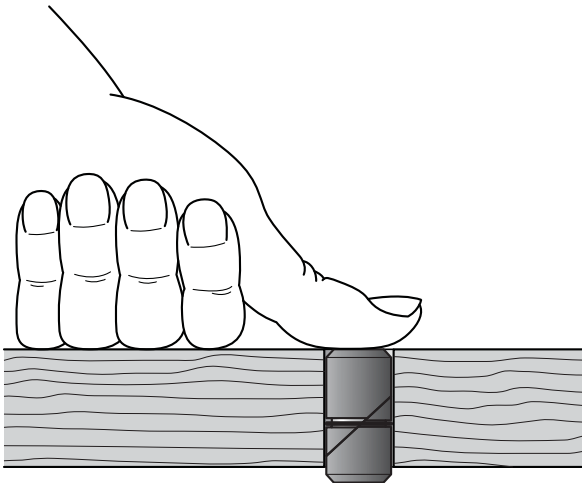

2. Push anchor down to desired depth.

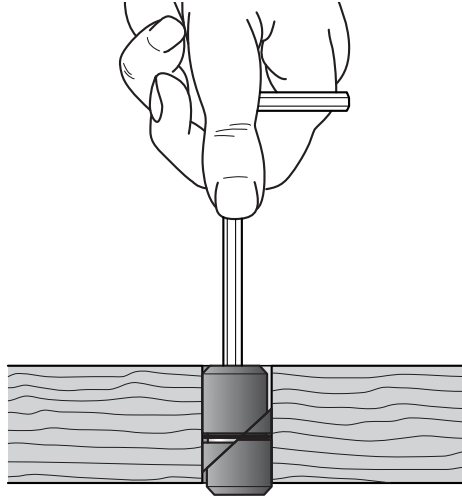

3. Tighten screw to lock anchor.

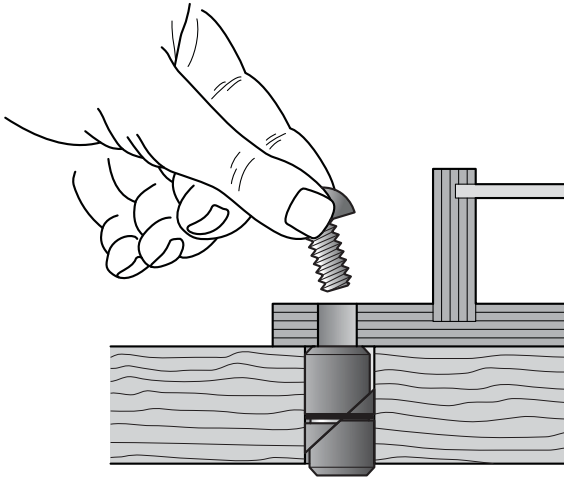

4. Attach jig or fixture with $\frac{1}{2}$ -13 fasteners.

veritas[®] Tools Inc.

814 Proctor Avenue 1090 Morrison Drive
Ogdensburg, New York Ottawa, Ontario
13669-2205 USA K2H 1C2 Canada

customerservice@veritastools.com
www.veritastools.com